


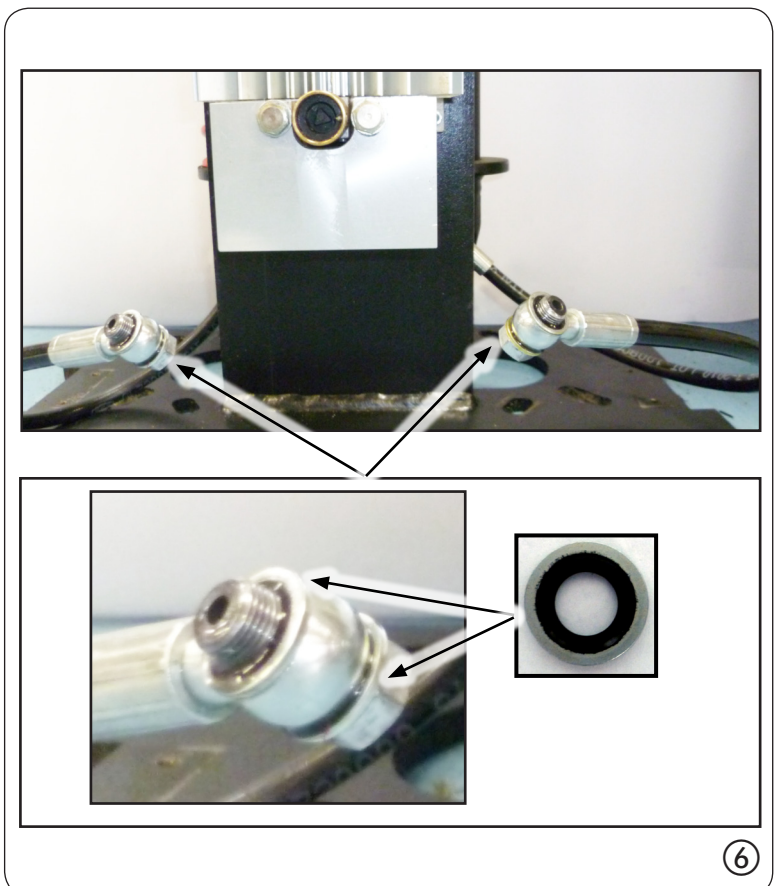
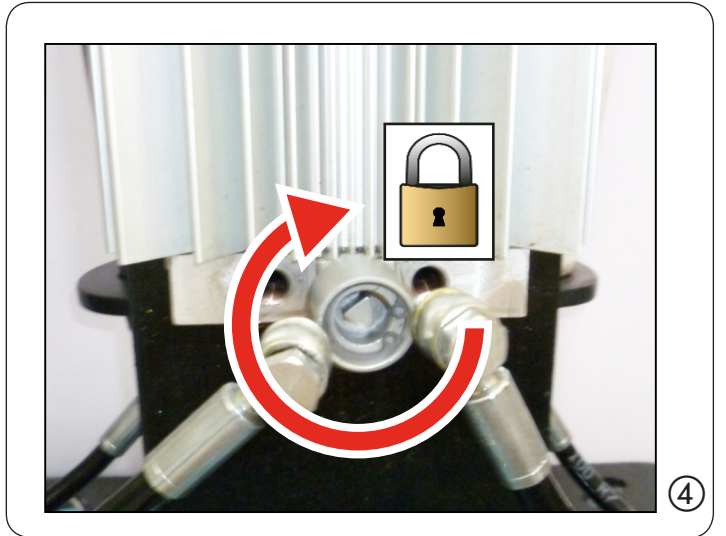
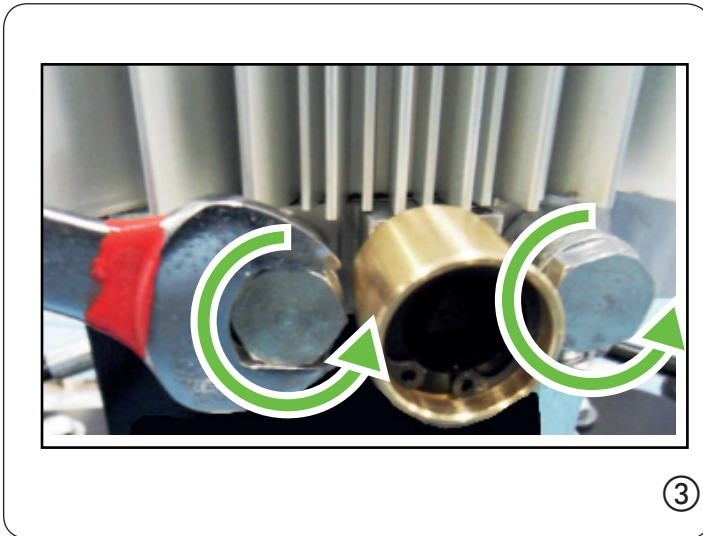
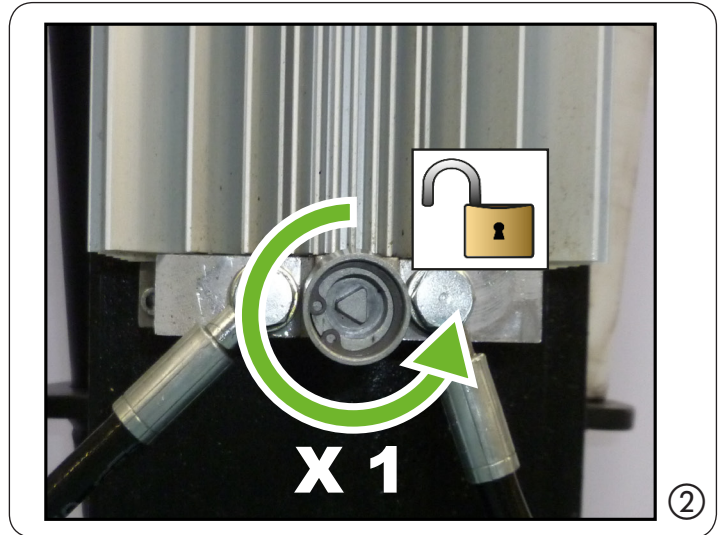
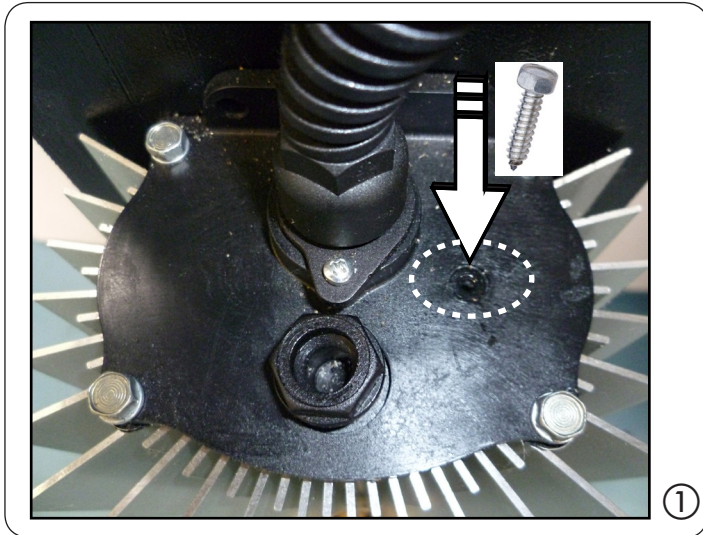


B680H

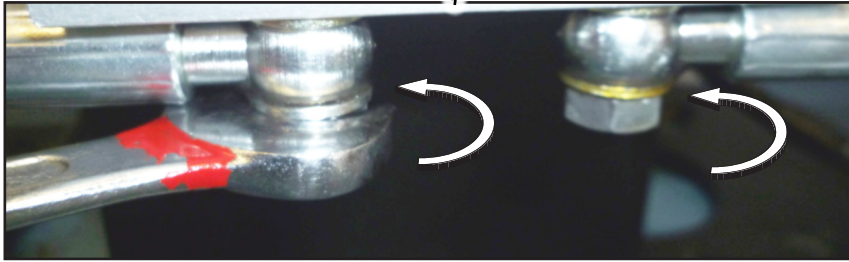

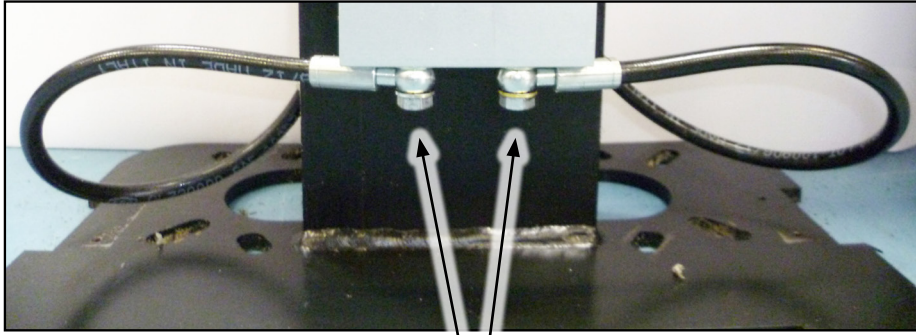




⑦

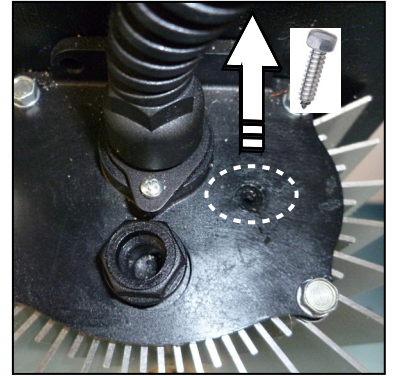


⑧

IT - Regolazione resistenza alla forzatura in apertura.
 EN - Adjusting the resistor to forcing when opening.
 FR - Réglage de la résistance au forçage en ouverture.
 DE - Einstellung des Widerstands gegen Aufbrechen während der Öffnung.
 ES - Regulación de la resistencia al forzamiento en apertura.

NL - Afstellen van de weerstand bij forcering opengaande beweging.
 RU - Регулирование функции антивзлом.
 PL - Regulacja oporu przy forsowaniu otwierania.
 AR - حتفلا دن عفدلا فوقل فمواقملا لي دعيت
 ZH - 调整阻力以强制打开
 PT - Regulagem da resistência à abertura forçada.

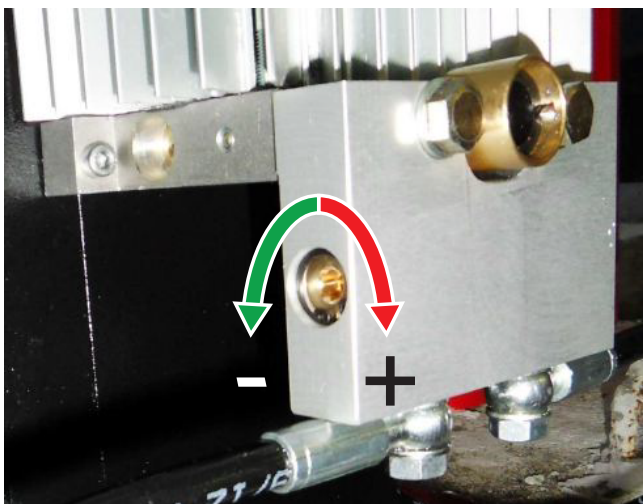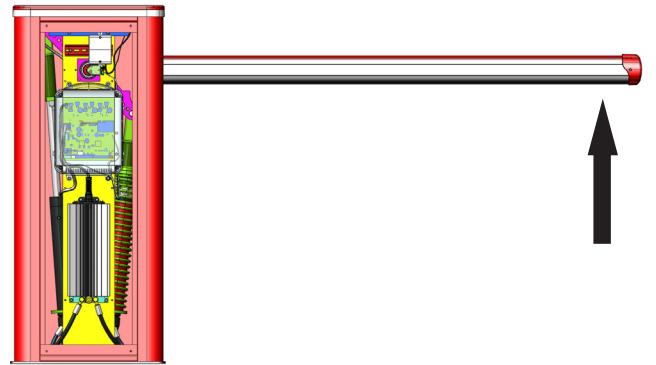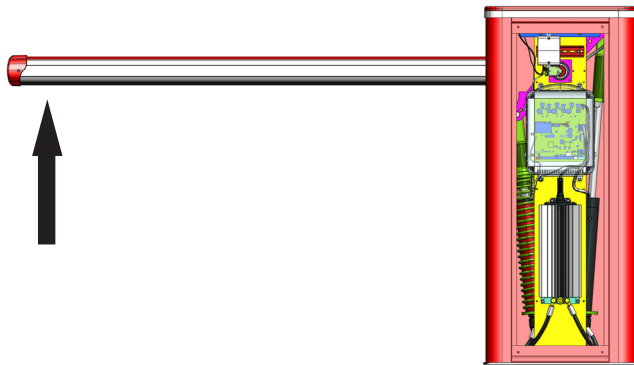

⑨ A

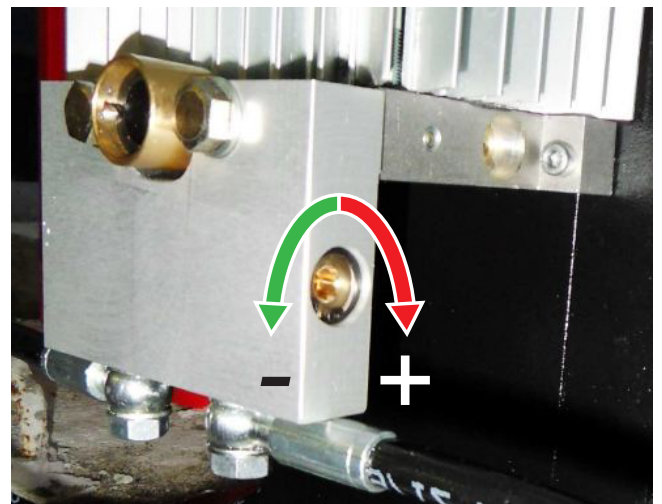

⑨ B